

90° & VARIABLE ANGLE PEEL FIXTURE

Catalog Numbers 2820-035, 036

Both the 90° peel test fixture and the variable angle peel test fixture consist of a bearing-mounted sled that is linked to the testing machine's crosshead by a cable and pulley system. The variable angle peel fixture has a sled with a T-slot sled onto which you secure the substrate material. The 90° peel fixture has only a T-slot sled. The T-slots allow the substrate clamps, which secure the substrate to the sled, to adjust to a variety of substrate widths.

PRINCIPLE OF OPERATION

Peel fixtures provide a condition of use to measure the bond strength between laminated surface coatings, films, packaging, and their rigid backings, as well as other bonded structures.

To initiate a test, one end of the specimen is secured to a substrate that is, in turn, secured to the T-slot sled, and the other end is inserted into the appropriate grip. As the crosshead moves in the tension direction, the cable pulls the sled laterally along the guide rail to maintain a constant angle for the peel (90° angle or the pre-set angle on the variable peel fixture). This prevents any exertion of outside forces on the specimen. The force required to peel the specimen is monitored by the load cell on the crosshead, providing a direct measure of bond strength.

FEATURES AND BENEFITS


- Adjustable holding straps to accommodate substrates up to 127 mm wide
- Maximum operating temperature: 60°C (140°F)
- Load weighing system monitors force to provide a direct measurement of bond strength
- Upper fittings: Use appropriate grip




2820-035 90° Peel Fixture on 68TM-50



2820-036 Variable Angle Peel Fixture on 34SC-5

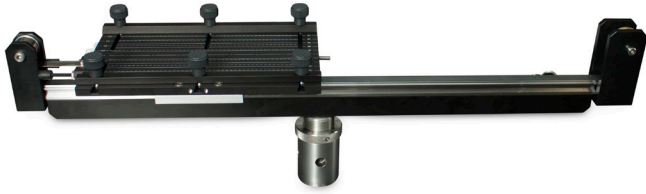

2820-035 - 90° Angle Peel Fixture

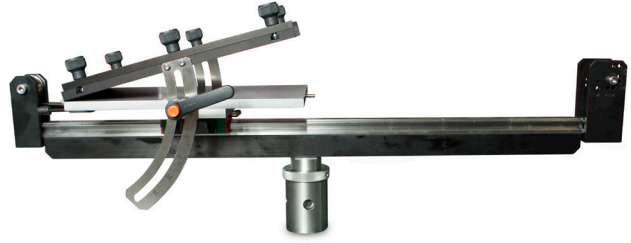

2820-036 - Variable Angle Peel Fixture

SPECIFICATIONS

		2820-035	2820-036
Associated Standards		ASTM B571, D2861, D3330 (Method F), D6252, D6862	ASTM B571, D2861, D3330 (Method F), D6252, D6862
Peel Angle		90 °	30, 45, 60, 90, 120, 135, 150 °
Maximum Load	kN	1	1
	kgf	100	100
	lbf	225	225
Table Width	mm	150	150
	in	5.91	5.91
Table Length	mm	250	250
	in	9.84	9.84
Maximum Substrate Width	mm	127	130
	in	5	5.1
Maximum Substrate Length	mm	250	250
	in	9.84	9.84
Maximum Substrate Thickness	mm	7	7
	in	0.27	0.27
Slide Rail Length	mm	704	732.5
	in	27.7	28.84
System Compatibility	A1 Mount	334X, 3400, 444X, 554X, 584X, 594X, 68SC	
	A2 Mount	336X, 3400, 446X, 556X, 596X, 338X, 448X, 558X, 588X, 598X, 68TM, 68FM	
Minimum Rigid Substrate / Carrier Plate Width for Clamping	in	1.5	1.5
	mm	40	40
Additional Equipment Requirements		Requires appropriate upper grip (Not supplied)	

Note:

- Other systems may require additional adapters. Contact Instron® technical support for information.

www.instron.com


Worldwide Headquarters
825 University Ave, Norwood, MA 02062-2643, USA
Tel: +1 800 564 8378 or +1 781 575 5000

European Headquarters
Coronation Road, High Wycombe, Bucks HP12 3SY, UK
Tel: +44 1494 464646